


1

Marking for Brackets

You should allow a minimum space of 10cm between the top of the recess and your sky lantern blind for good ventilation.

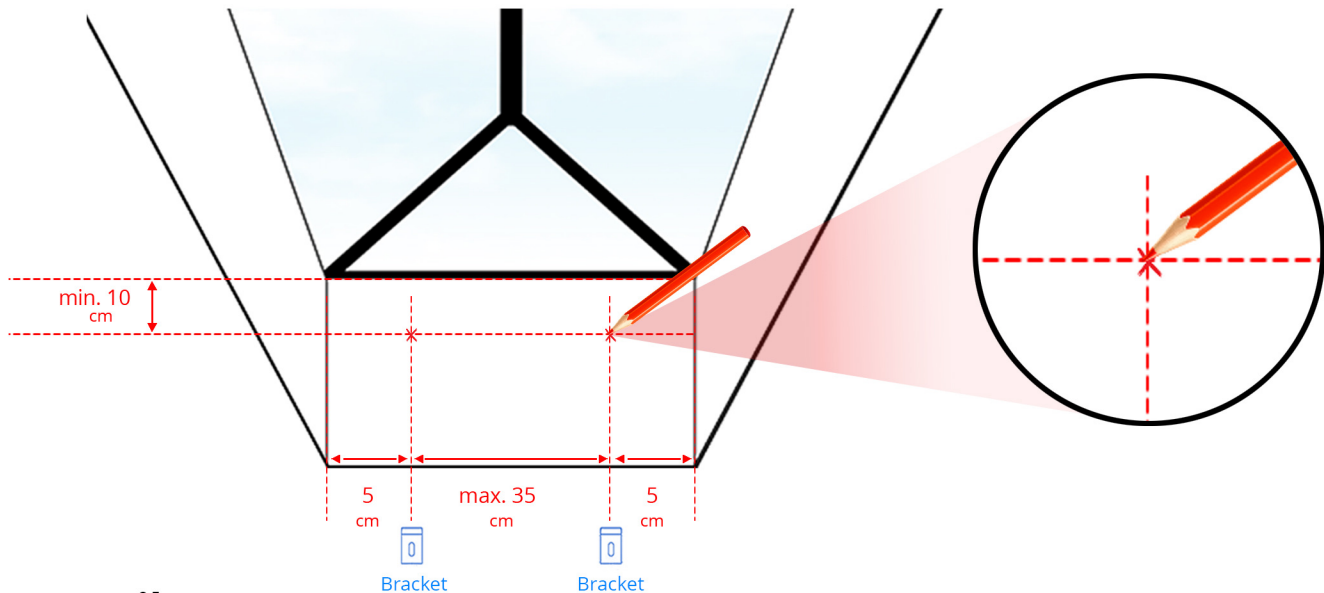

Top Rail

Mark the brackets at the recommended position within the sky lantern recess (as shown in the above diagram) for the top rail.

Bottom Rail


Repeat the above step and mark the brackets at the opposite end for the bottom rail.

NOTE: Ensure that the mounting is secure enough to support the blind. Position the brackets in a way that avoids any possible obstructions.

2

Mounting the brackets

Ensure you use wall plugs and screws specifically designed for use in plasterboard, masonry, or material you are drilling into.

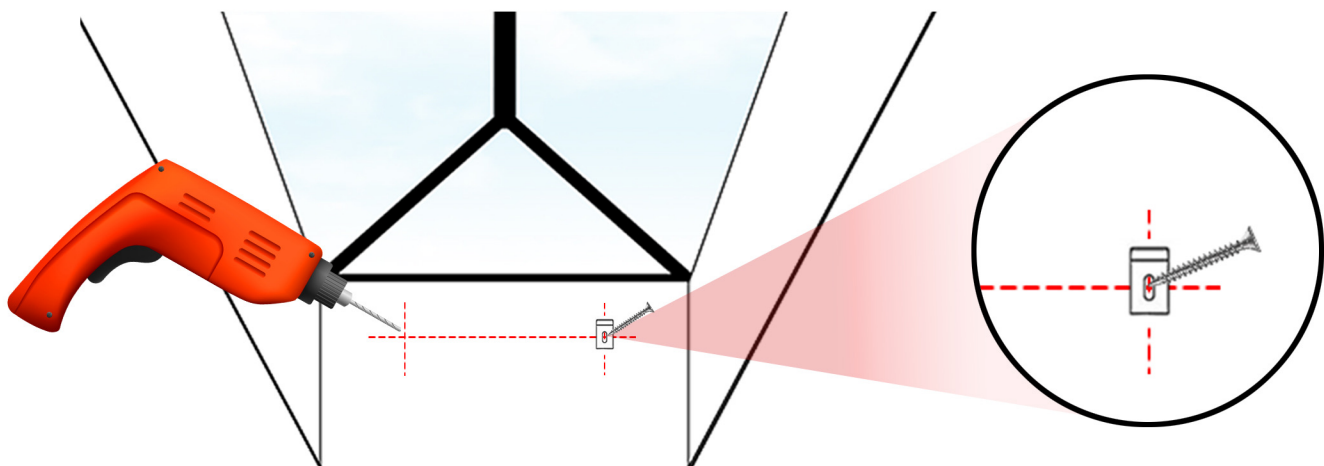

Drill and mount the brackets as shown in the above diagram.


3

Mounting the head rail

Securely attach the bracket to the headrail by gently pushing the back of the rail-lip up until it audibly clicks into the groove.

Mounting the Bottom-rail (tension rail)

Mount the tension rail as the head rail and follow the same steps. Ensure that the bottom rail position aligns correctly with the headrail. The length of the guiding cables has been determined based on the ordered drop length.

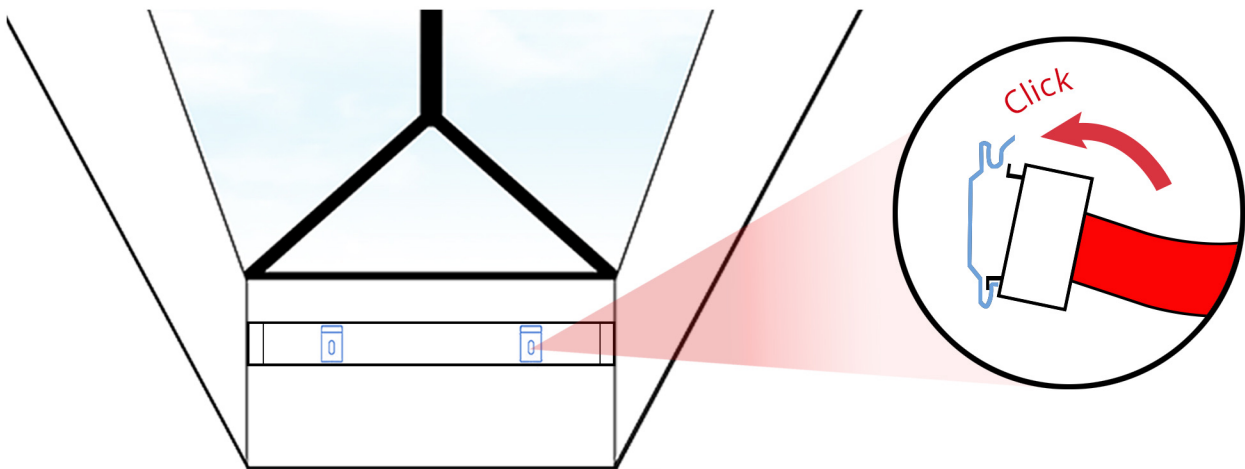

4

Tab operation with wand control

Connect the wand to the operating tab, then effortlessly adjust the blind upward or downward.

