


Recess Blind Fitting (only)

We recommend measuring the area where the blind will be installed within the 'Recess,' positioning as close to the window as possible. Ensure you account for any obstructions, such as handles, tiles, or picture rails, to achieve an accurate fit. Always double-check your measurements before placing your order!

Note: We will make the blind size to the measurements specified by you on order, less any deductions as outlined on the product information tab.

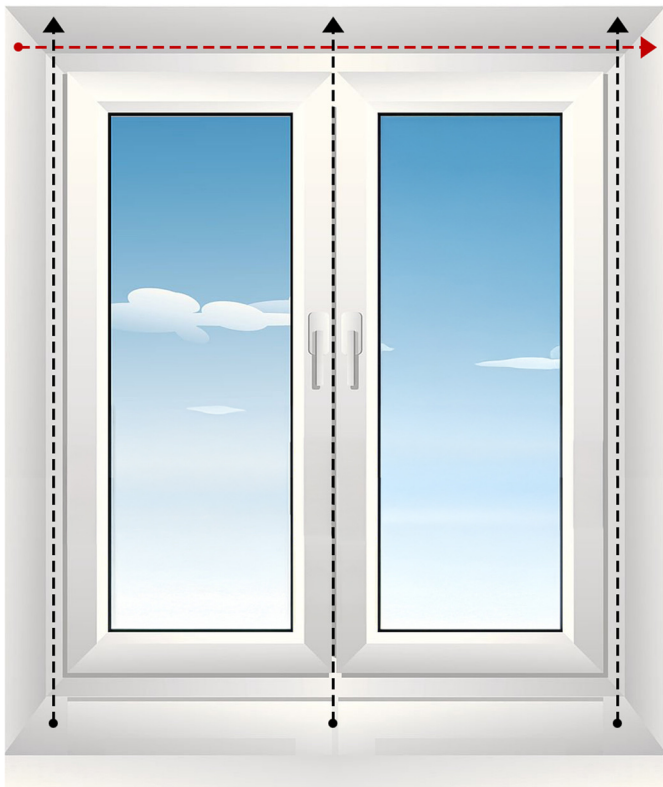

Tips

- ✓ **Use a Steel Metal Tape Measure** for accuracy and measure in centimetres to the nearest millimetre.
- ✓ **Measuring the Width** - Measure the width at the top of the 'recess,' from wall to wall, (**making no deductions**), as this will determine the width of your blind. Be sure to double-check your measurements to ensure accuracy!
- ✓ **Measuring the Height in 3 Places** - Measure the height of the 'recess' from the top down along the left side, middle, and right side. Note the smallest measurement, as this will determine your blind height. Always double-check your measurements to ensure accuracy!
- ✓ **Look Out for any Obstructions** such as window handles, tiles, dado rails etc and take their position into account if necessary.

Important Note: The fabric will always be shorter by between 3.2cm to 3.6cm depending on the blind size ordered. The Roller Blind will always be manufactured with 'extra' fabric on the length to ensure the tube is covered and not visible when the blind is fully extended to the height ordered. We will make the blind size to the measurements specified by you on order, less any deductions as outlined on the product information tab.