


YOU SHOULD HAVE



• Grip Fit Cassette



• Grip Fit Blind




• Safety Device

INSTALLING THE CASSETTE


1

Place the cassette into the top of the recess. Offer one side and rotate the other side into position.

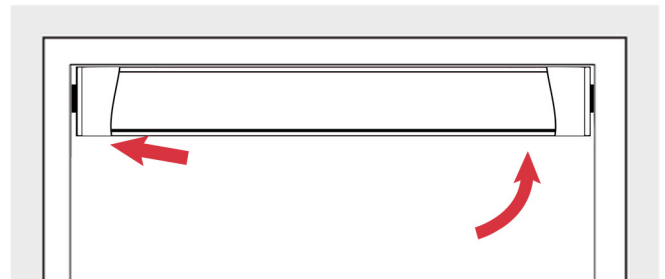


2

You can now pull down the bracket leaver on either side of the cassette.

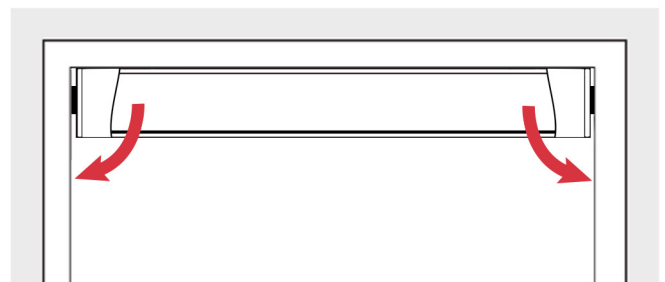

3


Finally slide out the trim covers to cover the gaps on the left and right hand side. The cassette is now secure into place and you can install the blind.

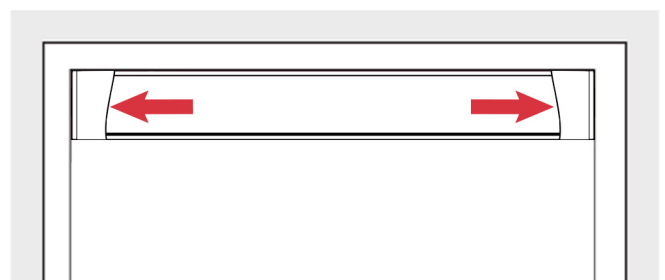

INSTALLING THE GRIP FIT ROLLER BLIND

4


Offer the idle end into to the bracket.

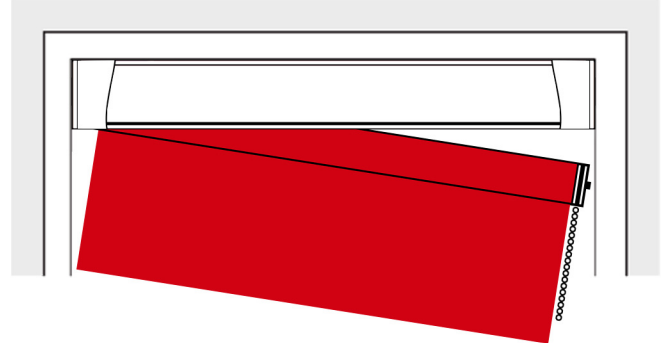

5

Then insert the control end on the opposite side.

Test the operation and your grip fit blind is ready to use.

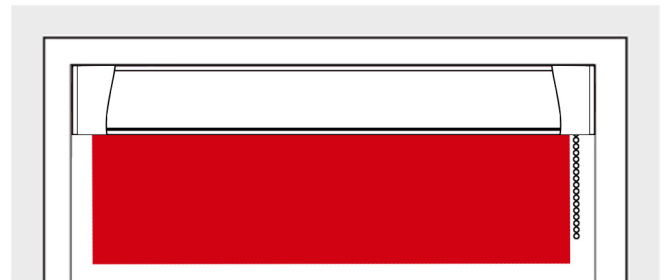

SAFETY DEVICE

Easy way connector

This blind is equipped with an Easy Way Connector.

If it gets disconnected simply push both halves together.

